 


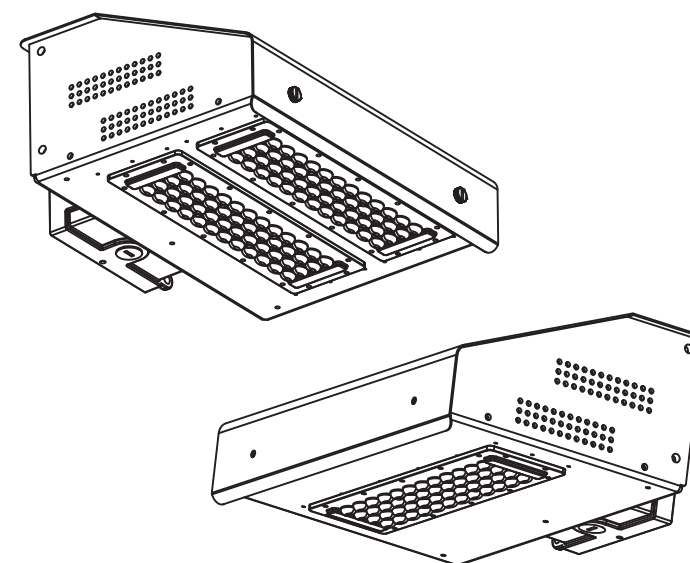

LED Full-Cutoff Wall Pack

Installation Instructions

 


ATTACH YOUR RECEIPT HERE

Item Number _____ Purchase Date _____


Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-492-6566.

PACKAGE CONTENTS

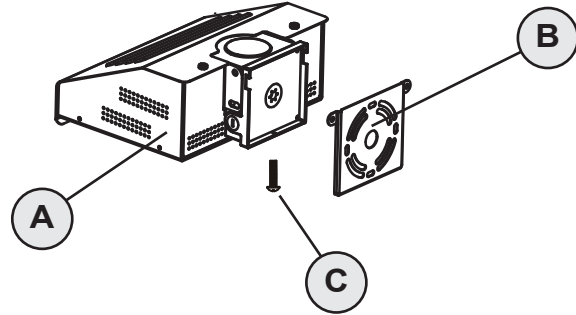

Part	Item Name	Qty.
A	Fixture Body	1
B	Back Plate (Preassembled to A)	1
C	Retaining Screw (Preassembled to A)	1

 HARDWARE CONTENTS

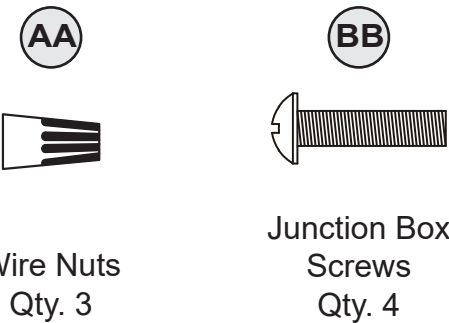

Wire Nuts
Qty. 3

Junction Box
Screws
Qty. 4

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. Failure to do so could lead to electric shock, fire or other injuries that could be hazardous or even fatal.

- Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This product must be installed in accordance with local, state and national electrical codes.
- Installation work shall be completed by a licensed installer that is familiar with the construction and operations of the product.

CAUTION:

- The fixture body is one piece. Do not disassemble it.
- This product can NOT be dimmed, do not installed in a dimming switch circuit.

NOTICE

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAFETY INFORMATION

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This Class B digital apparatus complies with Canadian ICES-003.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 20 minutes.

Tools Required for Assembly (not included): Phillips screwdriver, flathead screwdriver, safety glasses.

INSTALLATION INSTRUCTIONS

To ensure a safe and proper installation, an assistant should be available during the installation to support the fixture assembly while work is performed during mounting and wiring of the fixture. Before beginning installation, ensure that power is disconnected to the supply wires.

1. Remove the retaining screw (C) from the bottom of the fixture body (A) and set aside. Separate the back plate (B) from the fixture body (A).


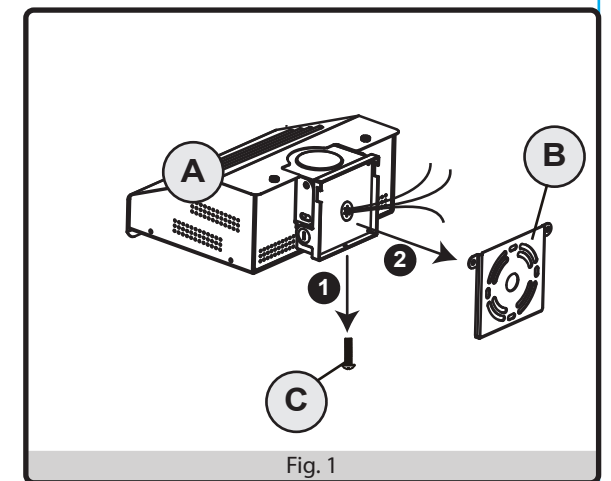 



Fig. 1

INSTALLATION INSTRUCTIONS

 2. Prior to mounting the back plate to the mounting surface, apply silicon sealant (not provided) around the perimeter of the junction box to seal out water from entering the wiring compartment. Align the back plate (B) with the junction box so that the back plate is flush against the mounting surface and the tabs are located in the upward direction. Route the supply wires from the junction box through the center opening of the back plate (B).

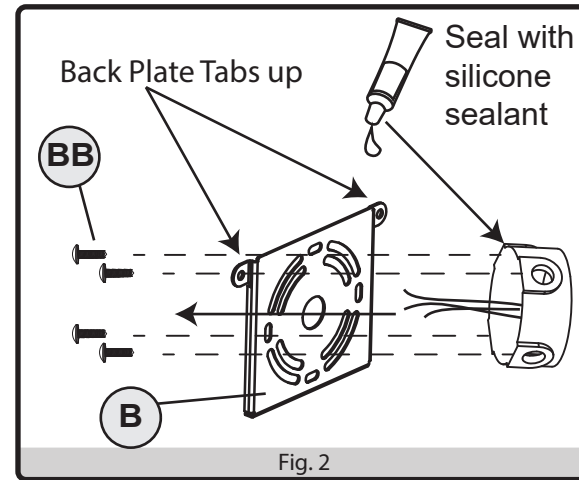


 3. Apply more silicon sealant around the mating edges of the body to the mounting surface and back plate to seal out the elements from the wiring compartment. Hold the fixture up to the mounted back plate (B) and connect the supply wires to the fixture wires -- black to black, white to white, and green to copper/bare. **WARNING:** If there is no ground supply wire, stop installation and consult a qualified electrician.

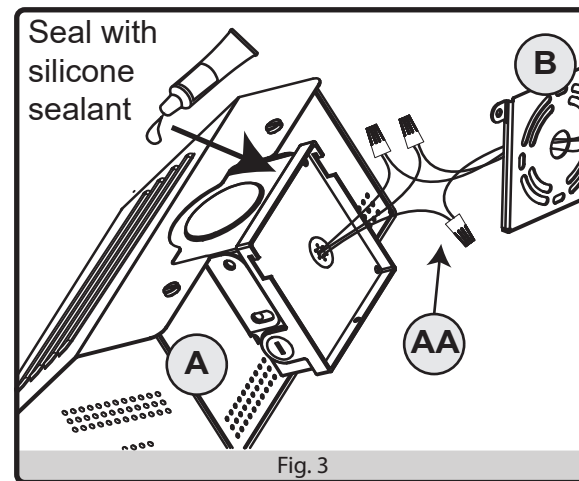


Once wire connections are made, secure each with a wire nut (AA).

 4. Tuck the wires and wire nuts into the junction box and align the back plate (B) tabs with the support notches on the mating face of the fixture body (A). Angle the fixture body so that the top edge of the tabs enter the notches first and once fully seated rotate the body down until it sits flush against the back plate and mounting surface. Ensure that the fixture is fully supported by the back plate before releasing the fixture from your hands.

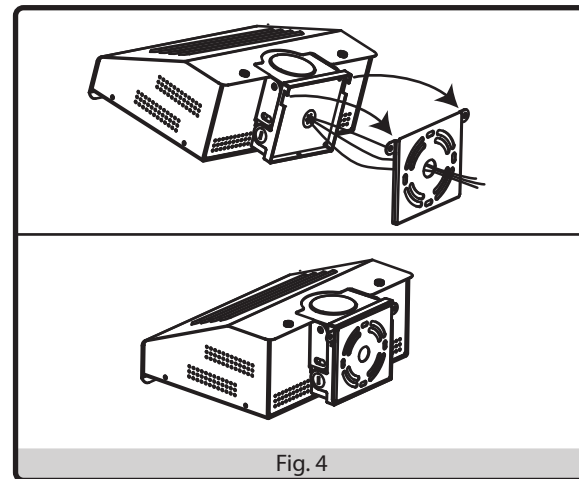

INSTALLATION INSTRUCTIONS

 5. Reinstall the retaining screw (C) back into the bottom of the fixture body (A) and check to ensure that the fixture body is locked in place before completing the installation.

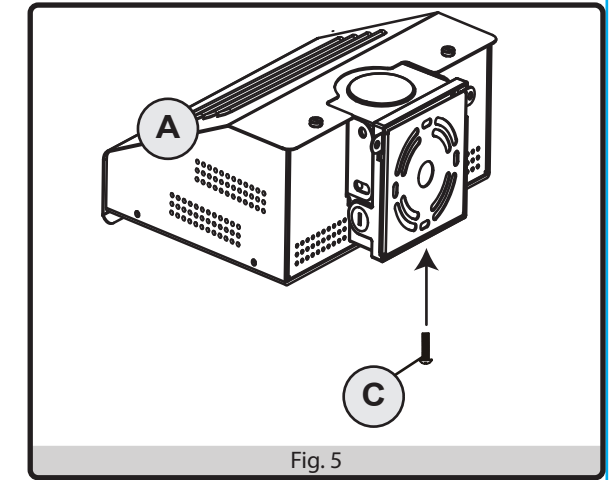

CARE AND MAINTENANCE

Clean with a mild, non-abrasive glass cleaner and soft cloth. Do NOT use solvents or cleaners containing abrasive agents. When cleaning the fixture, make sure the power is turned off, and any liquid spray should be applied to the cleaning cloth and not sprayed directly onto the fixture itself.

TROUBLESHOOTING

Problem	Possible Solution	Corrective Action
Fixture does not light.	1. Power is off. 2. Incorrect wire connection. 3. Defective wall switch.	1. Check circuit breaker or wall switch. 2. Check wire splices. 3. Replace switch.
Circuit breaker trips when light is turned on.	Crossed wires or power wire is grounded out.	Verify wires are correctly connected.

WARRANTY

This fixture is warranted to perform free from defects for five years. If it fails to do so, you may return it with proof of purchase to 13445 12th St., Chino, CA 91710 for replacement.