


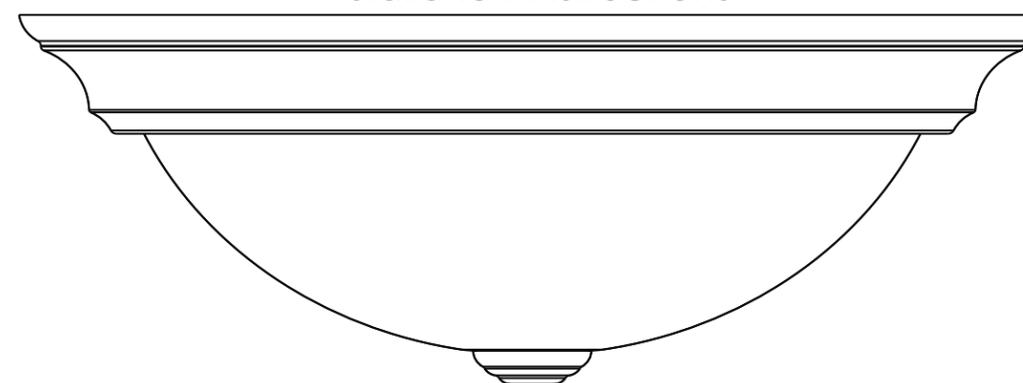

13-Inch Flushmount Ceiling Fixture

Installation Instructions




ATTACH YOUR RECEIPT HERE

Item Number _____ Purchase Date _____


Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-492-6566.

PACKAGE CONTENTS

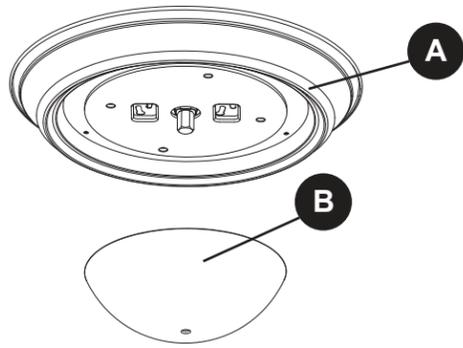

Part	Item Name	Qty.
A	Fixture Pan	1
B	Finial	1

HARDWARE CONTENTS (shown actual size)

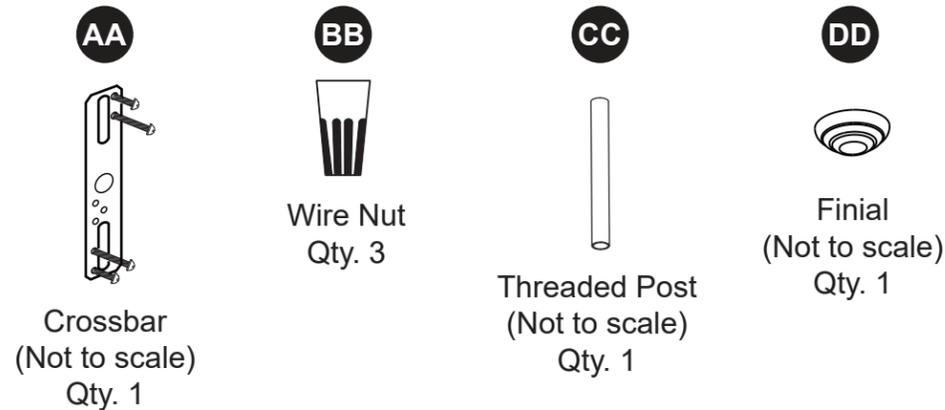

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. Failure to do so could lead to electric shock, fire or other injuries that could be hazardous or even fatal.

- Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION:

- The fixture body is one piece. Do not disassemble it.
- This product can be dimmed with most dimmer switches, please visit energeticlighting.com for more information and a full dimmer compatibility list.

NOTICE

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAFETY INFORMATION

NOTICE

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes

Tools Required for Assembly (not included): Phillips Screwdriver

INSTALLATION INSTRUCTIONS

1. Attach crossbar (AA) to outlet box (not included) by screwing in the two outermost screws preassembled on crossbar (AA).

Hardware Used

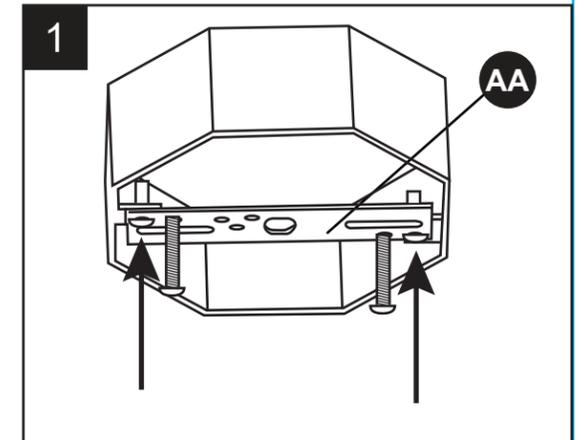


INSTALLATION INSTRUCTIONS


2. Ensure the power on the supply lines are off before proceeding to connect the fixture wires to the supply wires. Connect all three supply wires, securing with wire nuts (BB), black to black, white to white and green to copper/bare. **WARNING:** If there is no ground supply wire, stop installation and consult a qualified electrician.

Hardware Used


BB Wire Nut  x 3

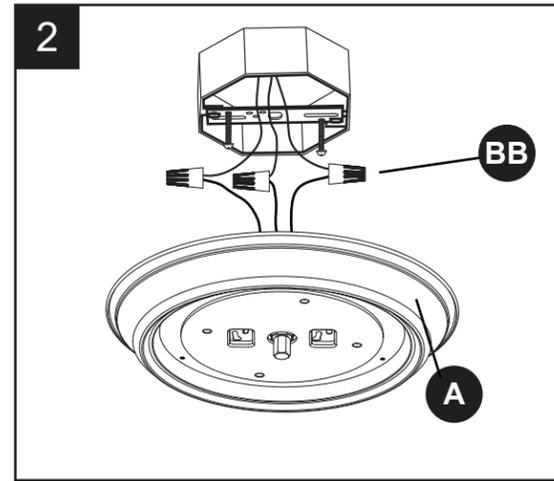

3. Lift fixture pan (A) up toward ceiling and carefully tuck wires into outlet box. Align keyholes on fixture pan (A) with long screws preassembled on crossbar (AA), then twist fixture pan (A) until the long screws engage the narrow end of the keyholes. Tighten long screws on crossbar (AA) to secure the fixture to ceiling.

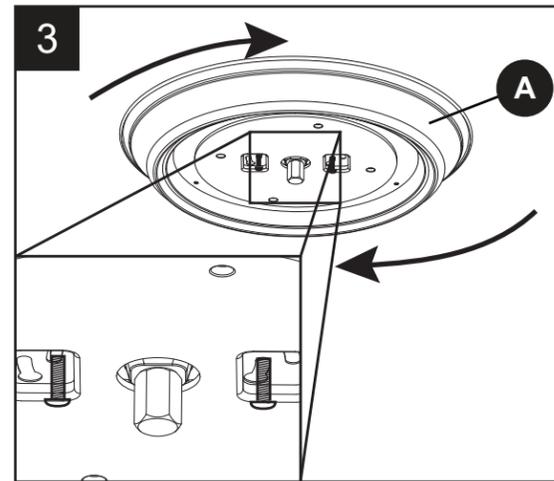


4. Install the threaded post (CC) into the center of fixture pan (A) by turning threaded post (CC) clockwise until secure.

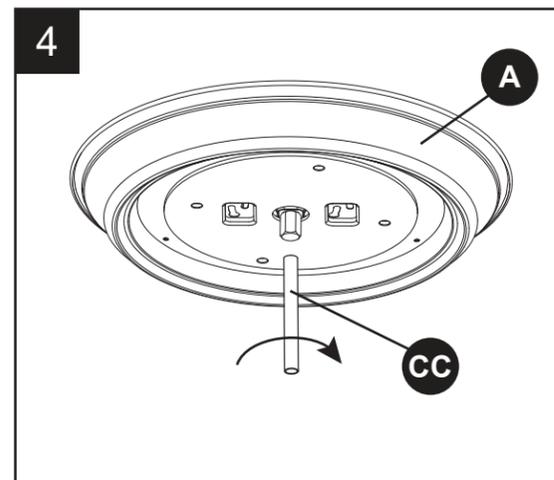

www.energeticlighting.com

INSTALLATION INSTRUCTIONS


5. Install the diffuser (B) onto the fixture pan (A) by aligning the threaded post (CC) so that it passes through the center hole on diffuser (B).

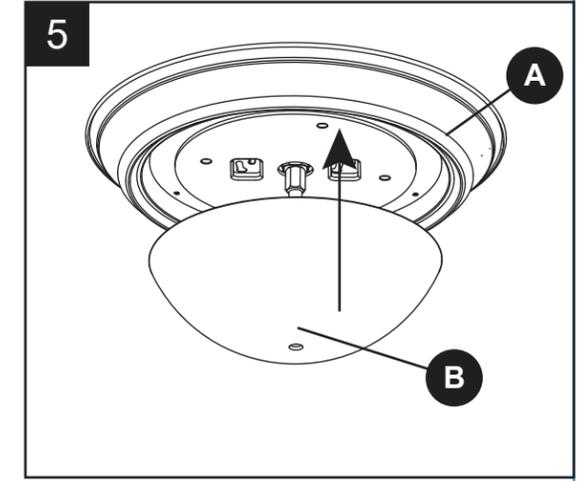

6. Install the finial (DD) onto the threaded post (CC) until the diffuser (B) is secured against the fixture pan (A).

Hardware Used

DD Finial  x 1

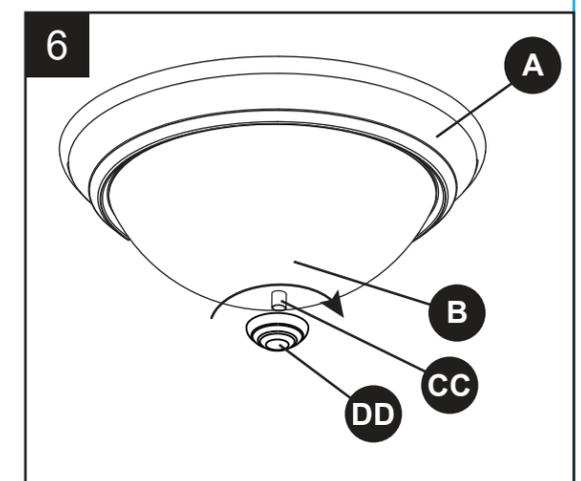

CARE AND MAINTENANCE

Clean with a mild, non-abrasive glass cleaner and soft cloth. Do NOT use solvents or cleaners containing abrasive agents. When cleaning the fixture, make sure the power is turned off, and any liquid spray should be applied to the cleaning cloth and not sprayed directly onto the fixture itself.

www.energeticlighting.com

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Fixture does not light.	1. Power is off. 2. Incorrect wire connection. 3. Defective wall switch.	1. Check circuit breaker or wall switch. 2. Check wire splices. 3. Replace switch.
Circuit breaker trips when light is turned on.	Crossed wires or power wire is grounded out.	Verify wires are correctly connected.

WARRANTY

This fixture is warranted to perform free from defects for three years. If it fails to do so, you may return it with proof of purchase to 13445 12th St., Chino, CA 91710 for replacement.